



ASSEMBLING INSTRUCTION SURABAYA DAYBED

PART LIST

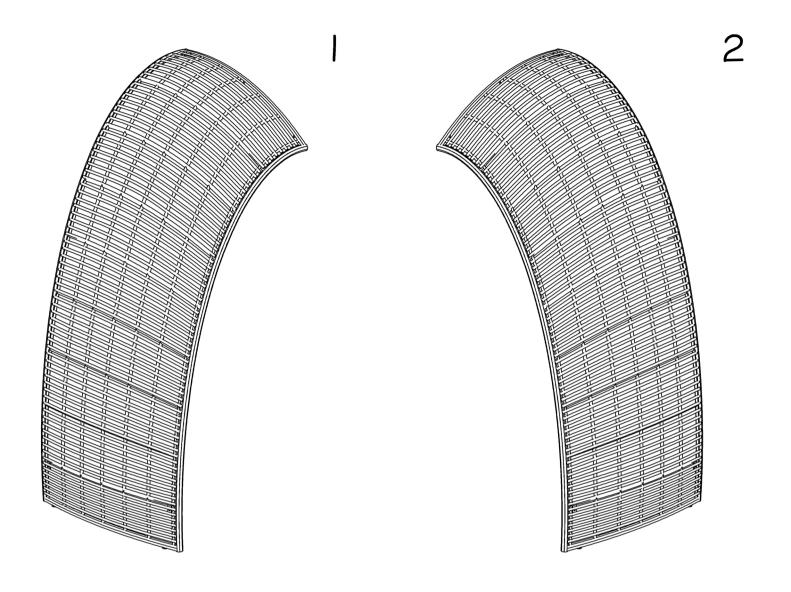

Left Panel


Right Panel

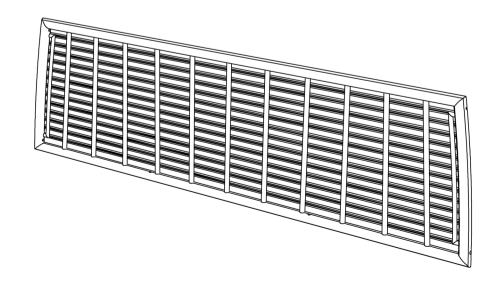


Back Panel

3



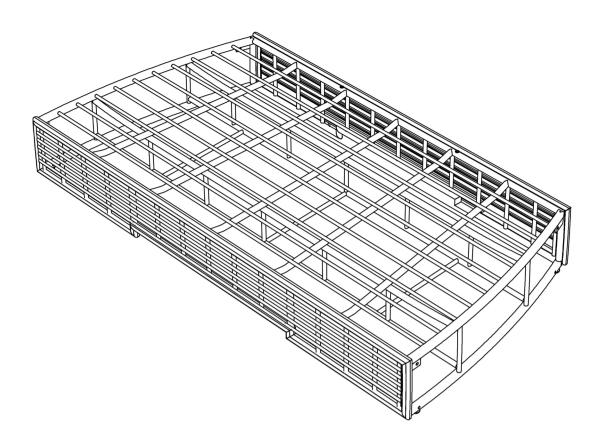


Base / Platform

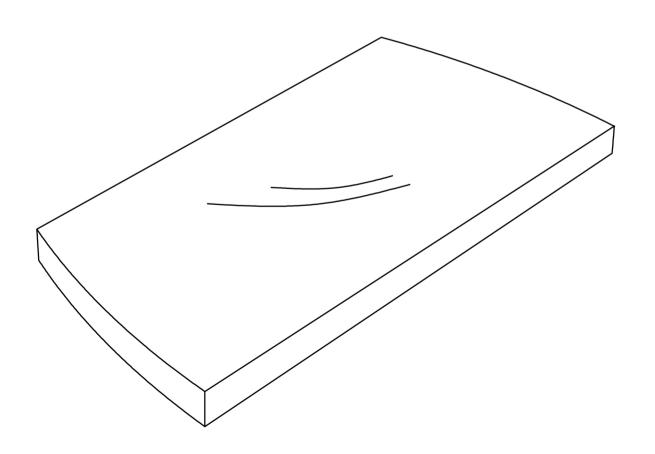

Seat Cushion

5

HARDWARE LIST

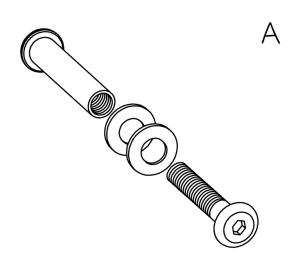





Bolt Nut M8 x 55mm (3 Pcs)

Bolt Nut M6 x 30mm (4 Pcs)

]





JCBC M8 x 45mm (4 Pcs)

JCBC M6 x 60mm (6 Pcs)

E






Allen Key L - 4 (1 Pcs)


Allen Key L - 5 (1 Pcs)


ASSEMBLING INSTRUCTION






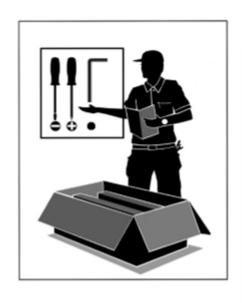

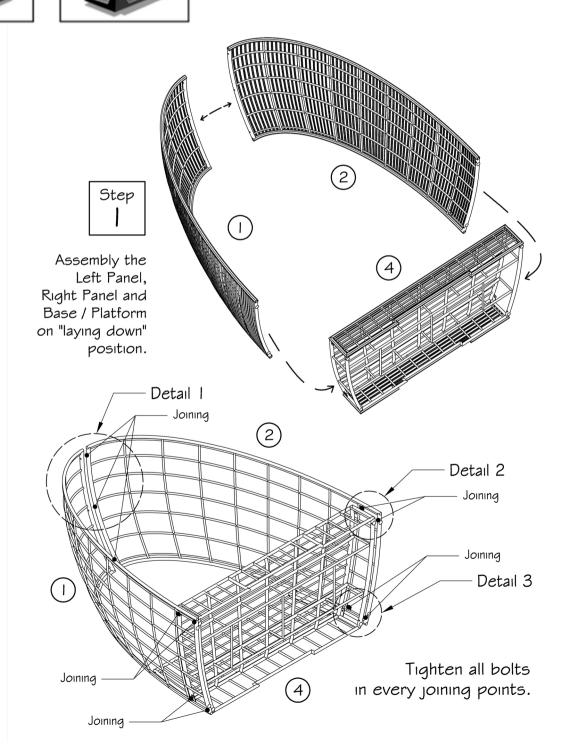


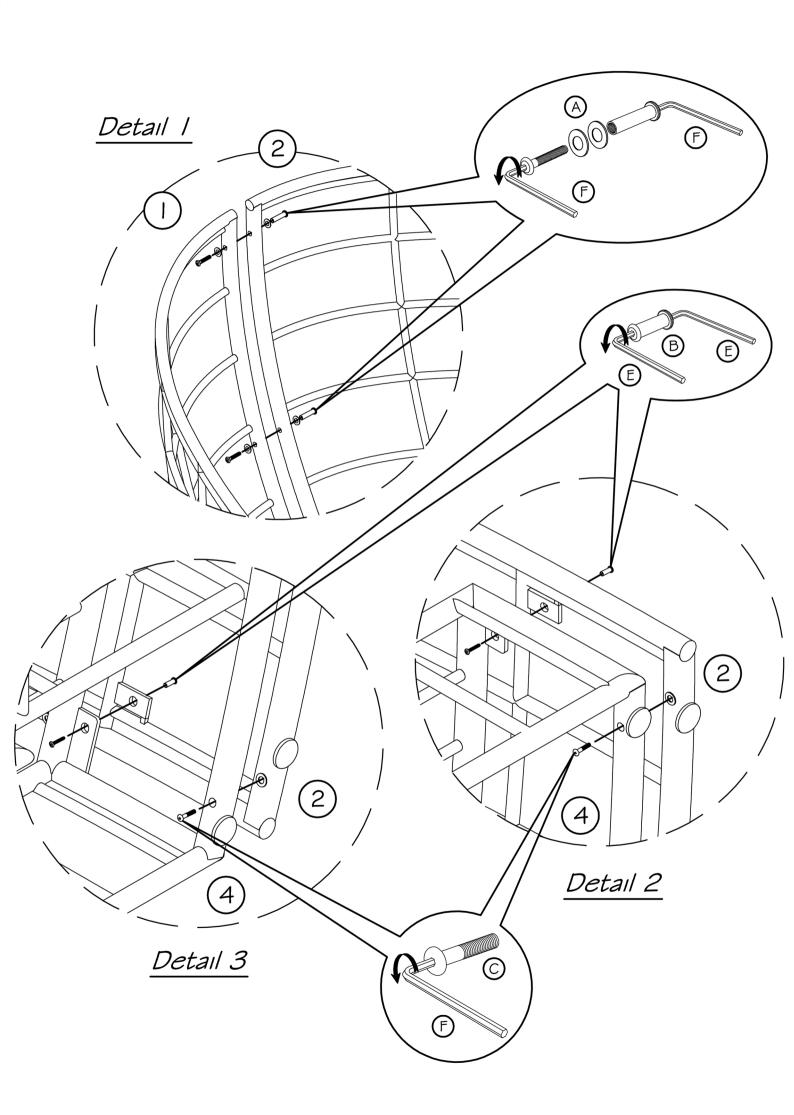

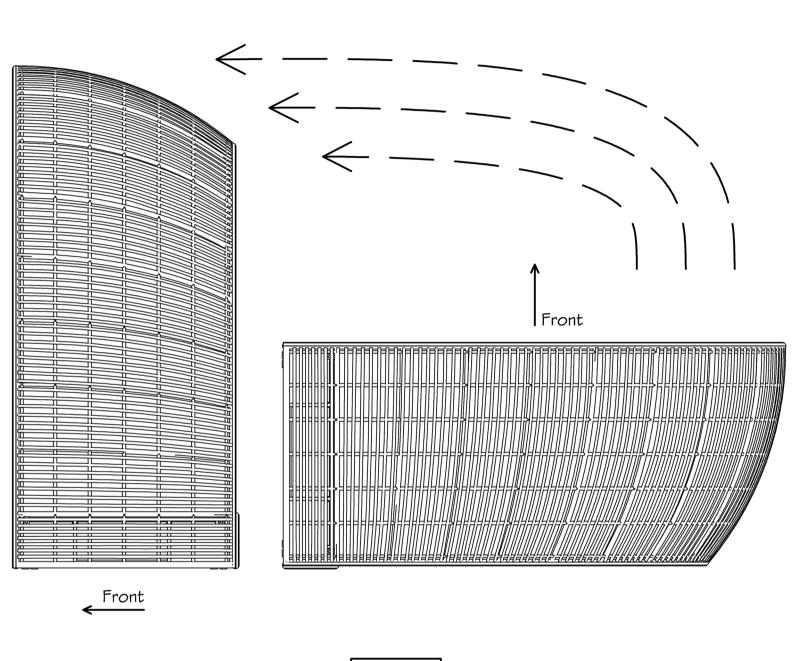


Step 2


Lift up the "Assembled Unit" until it sits on standing potition.

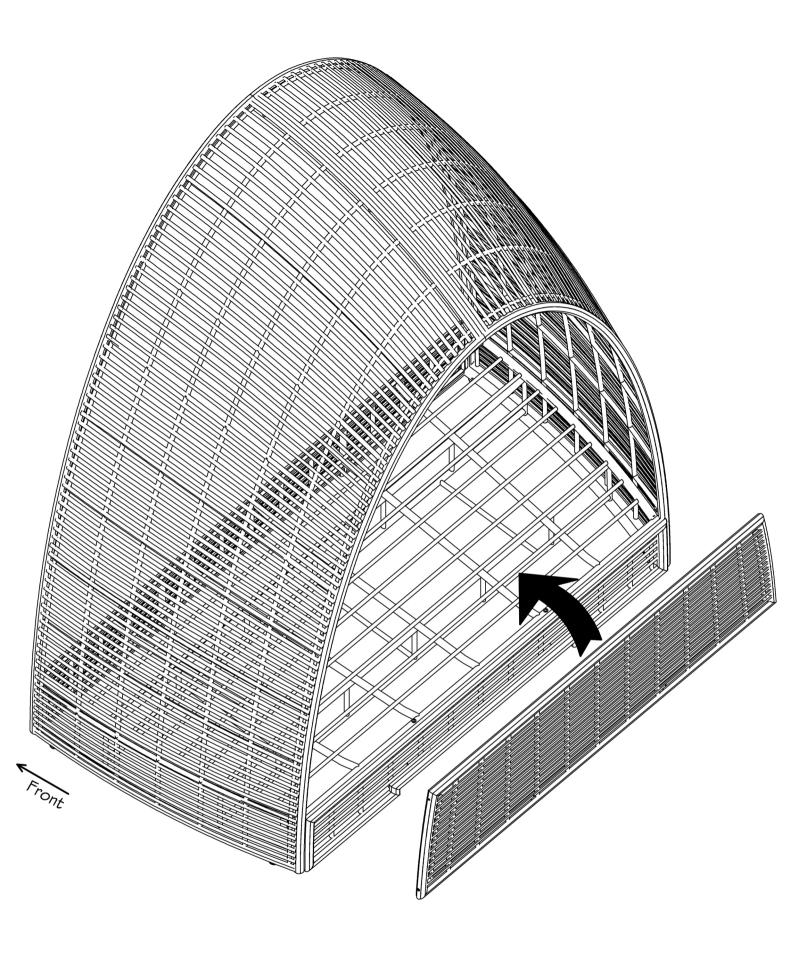

Step 3

Then assembly the Back Panel to the "Assembled Unit".

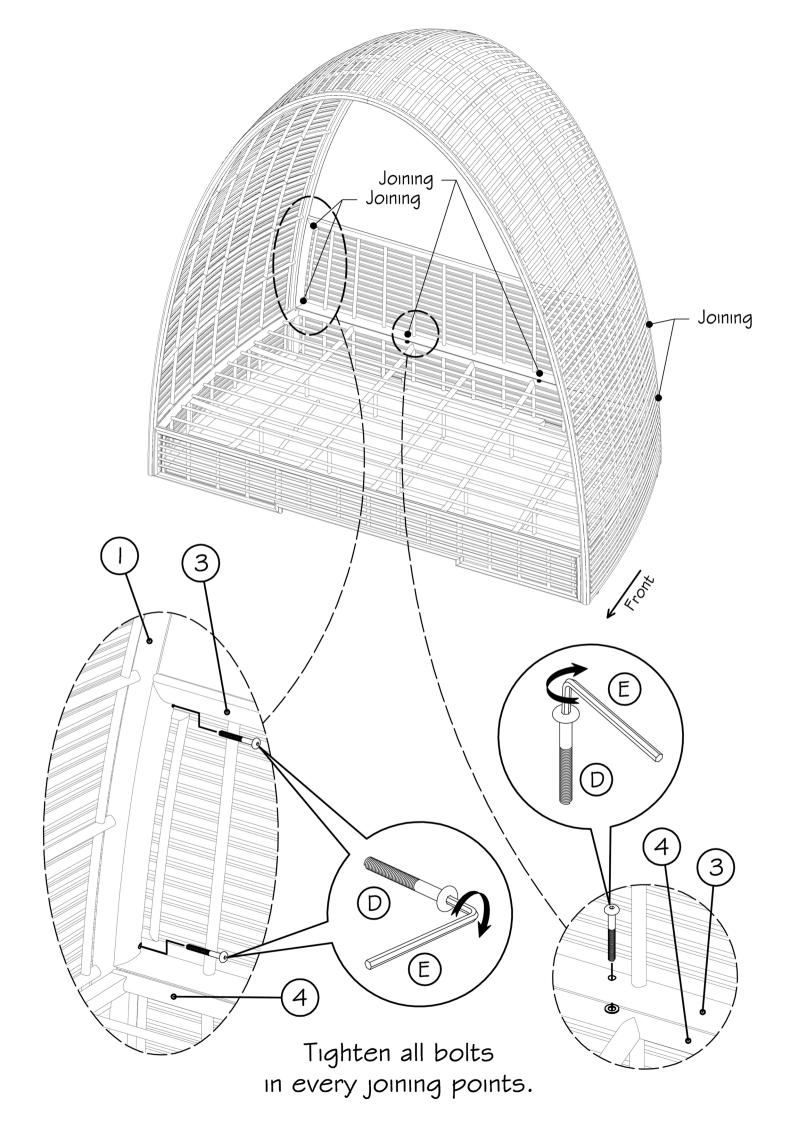

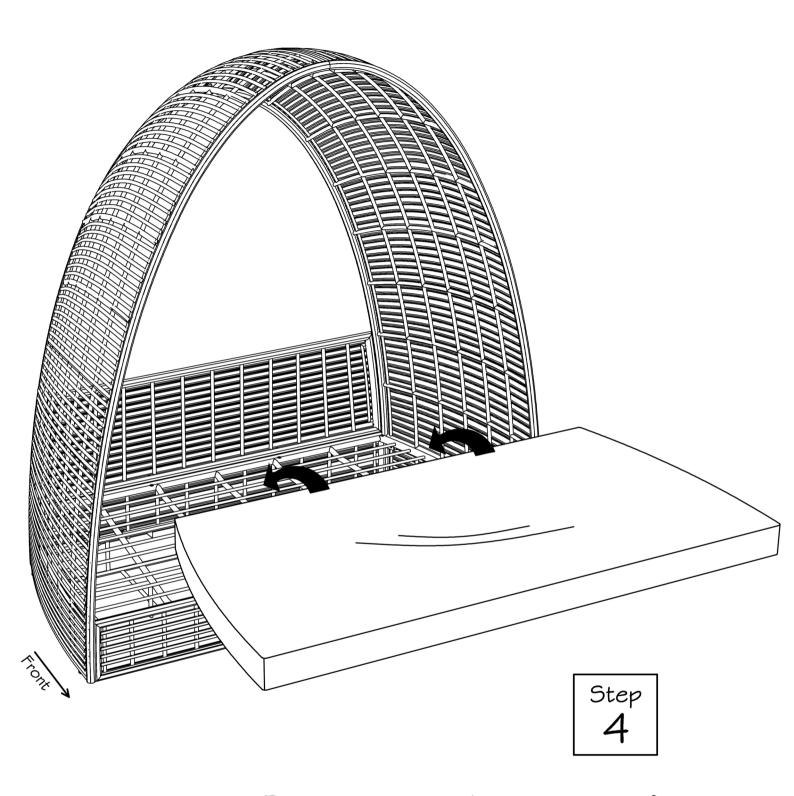

Put on seat cushion on top of the base / platform after fix all the bolts.

